


The Proper Way

TO KEEP YOUR HANDS OFF IT™


WHEN USING A **SHOVEIT®**

The ShoveIt® all-purpose hand safety tool enables workers to remain a safe distance away from danger zones and pinch points while maneuvering suspended loads or any other moveable object. The versatile V-shaped head allows workers to safely push against flat surfaces, corners, edges and tubulars. Opposing grab hooks can push and pull cables, slings, taglines, cargo basket rims or any other small diameter object. Proper usage and body positioning is the key to safe operations.


USE THE V-SHAPED HEAD TO:

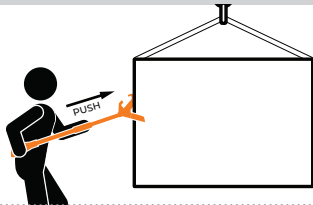


Push the corner or edge of an object to move it or guide and control the load

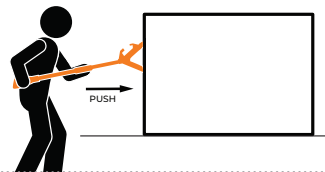


Push on a flat surface to move an object

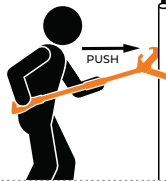


Push suspended vertical tubing

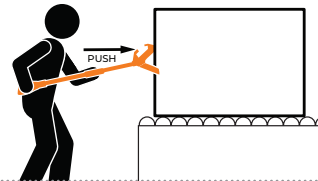

Push objects along a rolling rack

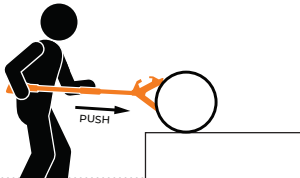


Push tubulars along a pipe rack

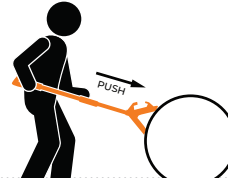


Push rolling objects on the ground


USE THE OPPOSING GRAB HOOKS TO:

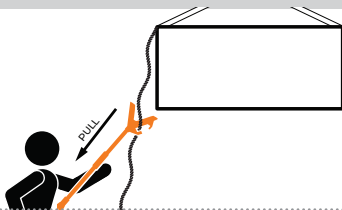


Retrieve tagline without being under the load

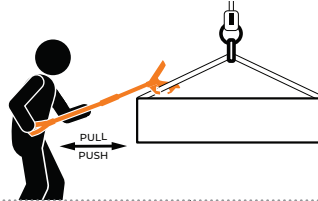

Push or pull cable, wire rope or chain slings to guide and control a load

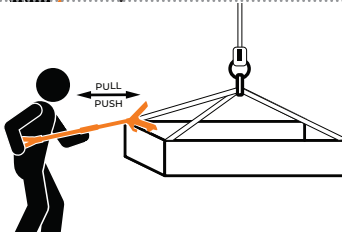

Push or pull cargo baskets with rims up to 5" in width

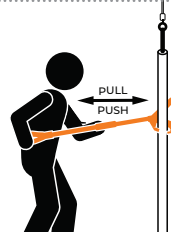

Push or pull suspended vertical tubing (1.5" diameter or less)



MADE IN THE U.S.A.



800.674.9224



Push Rating of 2,300 lbs
Pull Rating of 600 lbs



US PATENT NO. 8,376,430

Passed third-party high voltage ASTM F3121 Section 6.3 75 kV/ft. 60Hz test

PROPER HAND PLACEMENT

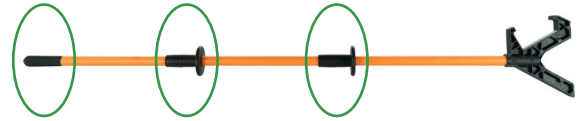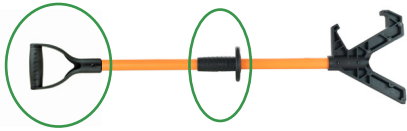

✓ DO'S



Always wear proper personal protective equipment as the job requires



Inspect the tool before each use



Use both hands when operating tool



Stand with both feet firmly planted on the ground




Use only for push / pull / guiding / rolling applications




Clean tool after each use and store in clean, dry environment

✗ DONT'S

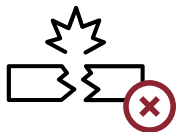

Do not use the tool if damaged

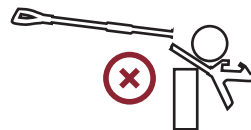

Do not use the tool as a pry bar



Do not use tool while tired or under the influence of drugs, alcohol, or medication



Do not overreach



MADE IN THE U.S.A.



800.674.9224